

I'm not a bot



## Candy smart ctf 1006 washing machine manual

WASHING MACHINE CTDF 1006 H V B1 C1 A G B2 C2 programme selector Select the wash programme by turning the control so that the desired option is opposite the reference indicator (p). The temperature will depend on the selected programme, as shown in the Programme Table.B1 spin speed selector Choose the spin speed. B2 delay start. Press to delay the start of the wash cycle. C1 cold wash key Press for a cold wash programme, suitable for delicate fabrics and non-color-fast garments. C2 aquaplus sensitive key Activate the Sensor Activa System for a special washing cycle that cares for fabric fibers and user skin.Turn on the machine, close the drum doors, add detergent and select the desired programme. Remember to press any additional option keys before starting the wash cycle. The display shows the machine's status and indicators for water temperature and spin speed. Detergent Residue Irritation & Delicate Fabrics: Precautions for Washing Machine Use Wash cycles can irritate sensitive skin or trigger allergies, even from minor detergent residue. It's recommended to use this feature when washing children's clothes and delicate fabrics, especially for bathrobes that retain detergent. This option isn't available for the wool program. Spin Speed Selection: - Pressing the spin button reduces speed by 100 rpm each time pressed. - Minimum speed allowed is 400 rpm or omitting spin by pressing repeatedly. Program Initiation: - Press key H to start programme after selecting options. - Cancel selected option by pressing key again (pilot light goes off). Delay Start Function: - Pre-programme wash cycle for up to 24 hours using button B2. - Activate delay start, then increase time in one-hour increments until h24 appears on display. Cycle Duration: - Programme duration displayed automatically when selecting a programme. - Constant updates of remaining time provided during the wash. Pause and Change Programs: - Cancel programme by moving selector to OFF position. - Select new programme and press key H to perform new cycle. Lamp flickers off after about two minutes, so open the door and add your preferred detergent - Make sure the drum and outer cover are securely shut. Next, press key H to resume the cycle. The machine will continue with the programme until it's finished, at which point "END" will appear on the display. Wait for the Door Lock lamp (G) to go dark again, roughly two minutes later. Once that happens, set the programme selector to the OFF position before opening the washing-machine lid and drum doors to remove your laundry.

Candy icc. Candy ctf 1006 manual. Candy washing machine gibraltar. Candy washing machine smart touch not working. Candy smart ctf 1006 manual.